







Technical Data TF120(-S) US Power supply nominal 100 to 240 VAC, 50/60 Hz tolerance 85 to 265 VAC, 50/60 Hz Power consumption running 2.5 W holding 1.3 W Transformer sizing 5 VA (class 2 power source) 3 ft, 18 GA appliance cable Electrical connection 1/2" conduit connector (-S models have 2 cables) Overload protection electronic throughout 0 to 95° rotation Electrical protection actuators are double insulated Angle of rotation max 95°, adjust. with mechanical stop min. 18 in-lb [2 Nm] Torque Direction of rotation reversible with cw/ccw mounting visual indicator, 0° to 95° Position indication (0° spring return position) Running time < 75 sec (0 to 18 in-lb) < 25 sec @-4°F to 122°F [-20°C to 50°C] < 60 sec @-22°F [-30°C] Humidity 5 to 95% RH non-condensing -22°F to 122°F [-30°C to 50°C] Ambient temperature Storage temperature -40°F to 176°F [-40°C to 80°C] NEMA type 2 / IP42, UL enclosure type 2 Housing Housing material UL94-5VA Agency listings† cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC (and 2006/95/EC for -S versions) Noise level (max) running < 50 db (A) spring return 62 dB (A) Servicing maintenance free Quality standard ISO 9001 Weight TF120 1.4 lbs (0.6 kg) TF120-S 1.5 lbs (0.7 kg)

[†] Rated Impulse Voltage 4kV, Type of action 1.AA (1.AA.B for -S version), Control Pollution Degree 3.

TF120-S US	
Auxiliary switch	1 x SPDT 3A (0.5A) @ 250 VAC, UL approved adjustable 0° to 95°

Torque min. 18 in-lb, for control of air dampers

Application

For On/Off, fail-safe control of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications. Control is On/Off from an auxiliary contact, or a manual switch.

The actuator is mounted directly to a damper shaft from 1/4" up to 1/2" in diameter by means of its universal clamp, 1/2" shaft centered at delivery. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.

Operation

The TF series actuators provide true spring return operation for reliable fail-safe application and positive close off on air tight dampers. The spring return system provides consistent torque to the damper with, and without, power applied to the actuator.


The TF series provides 95° of rotation and is provided with a graduated position indicator showing 0° to 90° .

The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches. Power consumption is reduced in holding mode. The actuator is double insulated so an electrical ground connection is not necessary.

The TF120-S US versions are provided with one built-in auxiliary switch. This SPDT switch is provided for safety interfacing or signaling, for example, for fan start-up. The switching function is adjustable between 0° and 95° .

SAFETY NOTI

Screw a conduit fitting into the actuator's bushing. Jacket the actuator's input and output wiring with suitable flexible conduit. Properly terminate the conduit in a suitable junction box.

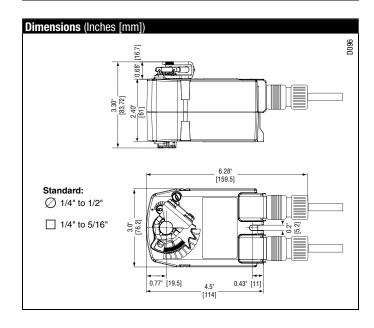



Accessories	
Tool-06	8mm and 10 mm wrench
KH-TF	Crank arm for up to 1/2" round shaft
ZG-TF2	Crank arm adaptor kit for TF
ZG-TF112	Mounting bracket, kit for TF
ZS-100	Weather shield (metal)
ZS-150	Weather shield (polycarbonate)

NOTE: When using TF120 US and TF120-S US actuators, only use accessories listed on this page. For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

Typical Specification

On/Off spring return damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a shaft up to a 1/2" diameter and center a 1/2" shaft. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall be protected from overload at all angles of rotation. If required, one SPDT auxiliary switch shall be provided having the capability of being adjustable. Actuators must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus listed and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

Wiring Diagrams

\times

INSTALLATION NOTES



Provide overload protection and disconnect as required.



CAUTION Equipment Damage!

Actuators may be connected in parallel. Power consumption must be observed.



For end position indication, interlock control, fan startup, etc., TF120-S US incorporate one built-in auxiliary switch: 1 x SPDT, 3A (0.5A) @250 VAC, UL Approved, adjustable 0° to 95° .



APPLICATION NOTES



Meets cULus requirements without the need of an electrical ground connection.

WARNING Live Electrical Components!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

